

Turntable proximity switch

Remove debris and dirt

Check motor, gearbox oil and sprockets/pulleys

Comments

Turntable chain loose, adjusted accordingly, customer had to move the machine to allow access to the tension assembly. Chain lubricated and contaminants cleared out.

Turntable photos



Carriage Assembly

Check film carriage operation (Up & Down in manual)

Check lift chain/belt for tension and lubrication

Check all sprockets and tension assembly

Check carriage guides

Check upper and lower limit switches

Check anti drop safety mechanism (if applicable)

Check motor/gearbox operation

Comments

Customer reported shaft missing for hinge on door. This has been repaired but will require replacing next service. Hinge is operational. Customer has the film loaded incorrectly, this has been shown to operators to get proper tension from the film and stretch.