



OWNERS MANUAL

£4.00

YOU MUST READ THIS MANUAL BEFORE INSTALLING AND/OR USING THIS HEATER



'M' SERIES BROODERS OPERATION & MAINTENANCE

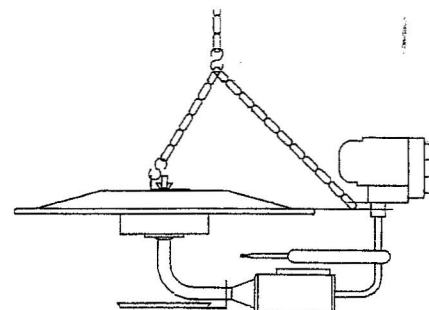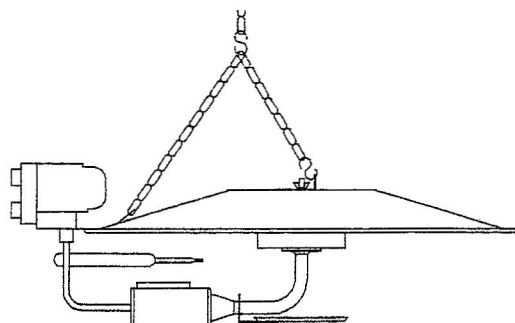

DESIGNED & MANUFACTURED BY
MAYWICK LTD-ENGLAND

WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read these installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

CLEARANCES TO COMBUSTIBLES. Dimensions shown are taken from the canopy rim.

| | To Floor | Around Sides | Above Top |
|-----------|-------------|--------------|-------------|
| M6/9 | 460mm (18") | 460mm (18") | 380mm (15") |
| M13/20/40 | 760mm (30") | 610mm (24") | 610mm (24") |

| Gas pressure | Gas Type | Manifold Pressure |
|--------------|----------|--------------------|
| All Models | Propane | 37 mbar (15" W.C.) |
| | Natural | 20 mbar (8" W.C.) |

Not to be used at altitudes above 2,500 feet

An approved isolating gas valve must be provided by the installer

FOR YOUR SAFETY

If you smell gas:

1. Open windows.
2. Don't touch electrical switches.
3. Extinguish any open flames.
4. Immediately call your gas supplier.

FOR YOUR SAFETY

Do not store or use petrol/diesel or other flammable vapours and liquids in the vicinity of this or any other appliance.

Exhaust fans must be operating on appropriate cycle when heating a building to avoid high concentrations of carbon monoxide.

IN THE U.K. INSTALLATION OF A MAYWICK GAS BROODER MUST CONFORM WITH

A) HEALTH AND SAFETY "THE GAS SAFETY (INSTALLATION AND USE) REGULATIONS 1998.

B) THE CONTROL OF SUBSTANCES HAZARDOUS TO HEALTH REGULATIONS 1997.

Note; Retain these instructions for future reference.

www.maywick.co.uk

July 2010