
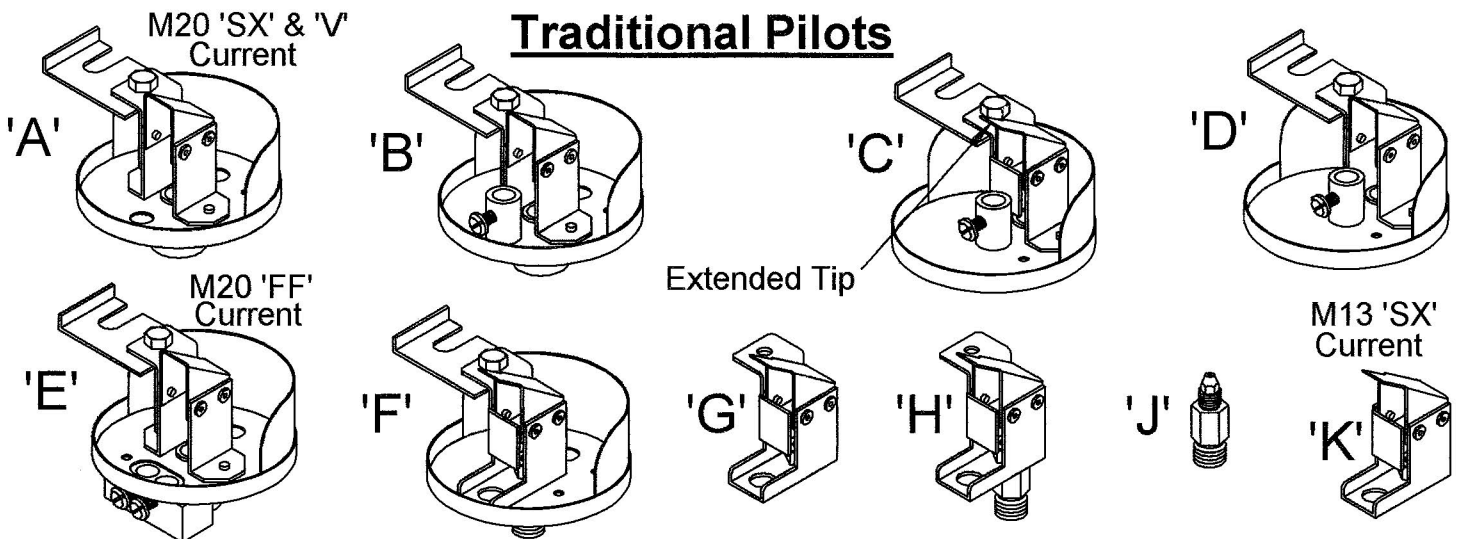


Pilot Feeds And Pilots

Key	Description	Part No.
A	M13 'S' & T123 'S' - Unitrol Thermostat	3202
B	M20 'S' - Spares - Unitrol Thermostat	3221
C	M40 'S' - Spares - Unitrol Thermostat	3211
D	M20 'FF' - Spares - Includes Clamp	3022
E	M20 'FF' & 'V' - Current - Spares	3222
F	M40 'V' - Spares	3212
G	T321 'S' - Includes Breakaway Fitting	3342
H	'S' Type Breakaway Fitting	6960
J	M2000 'SX' - Current - Spares	3228
K	M13 'SX' - Current - Spares	3208

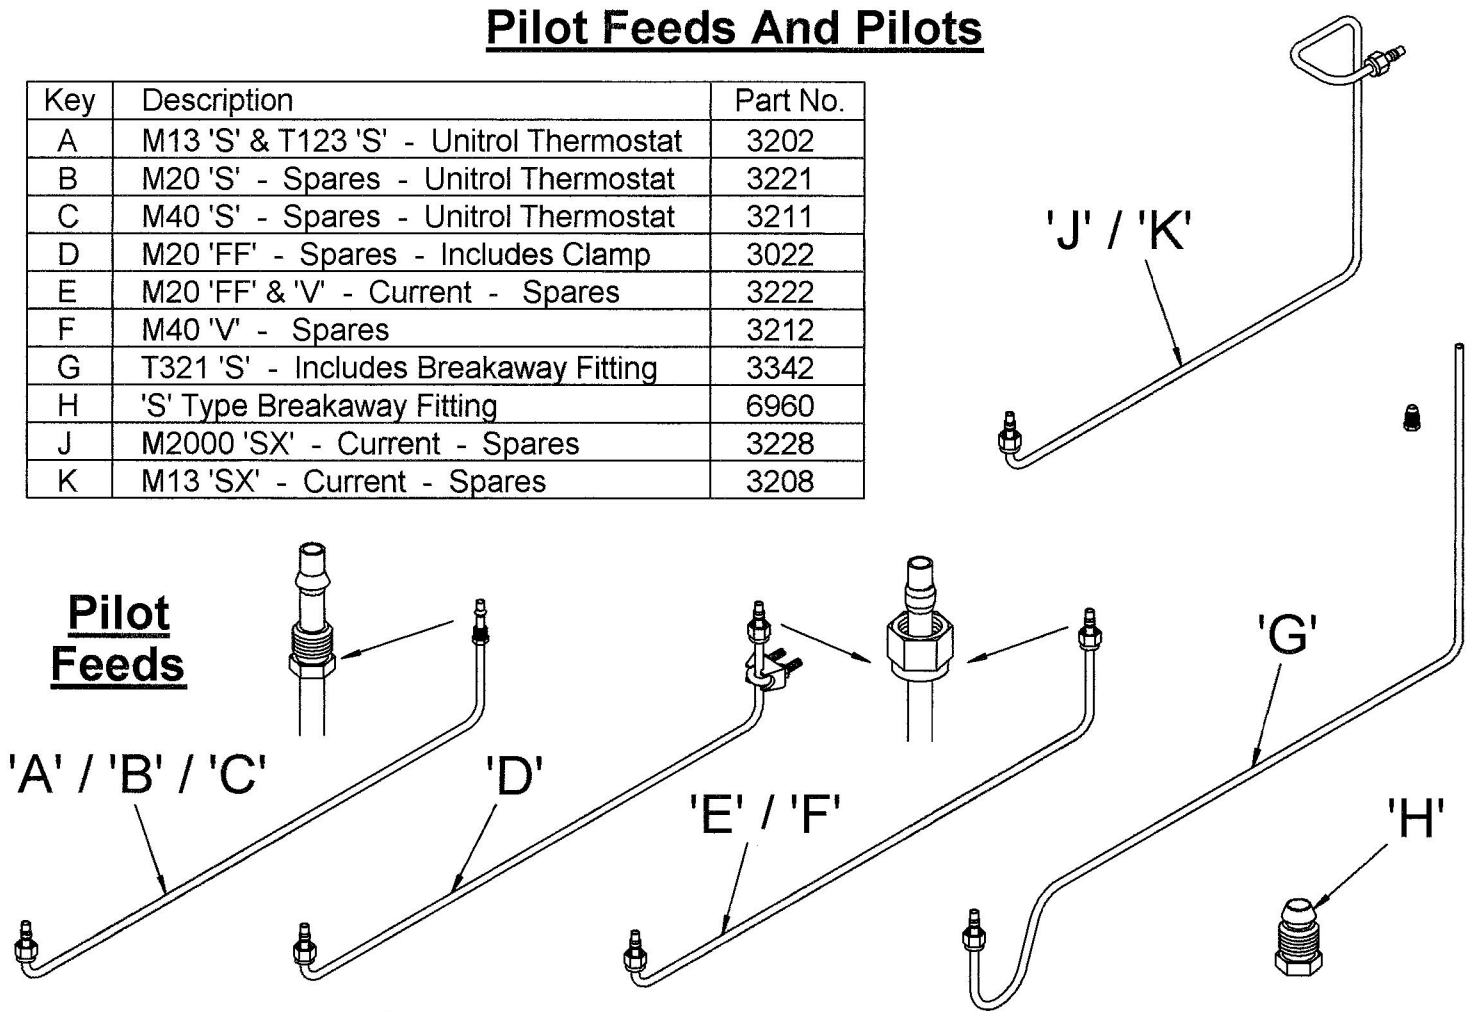

Key	Description	Part No.
A	M2000 'SX' & 'V' - Current - (M20 / M40 'S' & 'V' Spares)	3068
B	M20 / M40 'S' & 'V' - (Forward Thermocouple) - Superseded By Pilot 'A'	3068
C	M20 / M40 'S' & 'V' - (Central Thermocouple) - Superseded By Pilot 'A'	3068
D	M20 / M40 'S' & 'V' - (Central Thermocouple) - Superseded By Pilot 'A'	3068
E	M2000 'FF' - Current - (M20 / M40 'FF' Spares)	3067
F	M20 / M40 'S' & 'V' - (Screw-In Injector) - With Injector / No. 8 Jet - Spares	4062
G	M20 / M40 'S' & 'V' - (Screw-In Injector) - Pilot Only - Spares	3006
H	M20 / M40 'S' & 'V' - (Screw-In Injector) - Pilot With Injector / No. 8 Jet - Spares	3341
J	M20 / M40 'S' & 'V' - (Screw-In Injector) - Pilot Injector / No. 8 Jet - Spares	4112
K	M13 'SX' - Current - (Screw-In Injector - M13 'S' Spares)	3016