
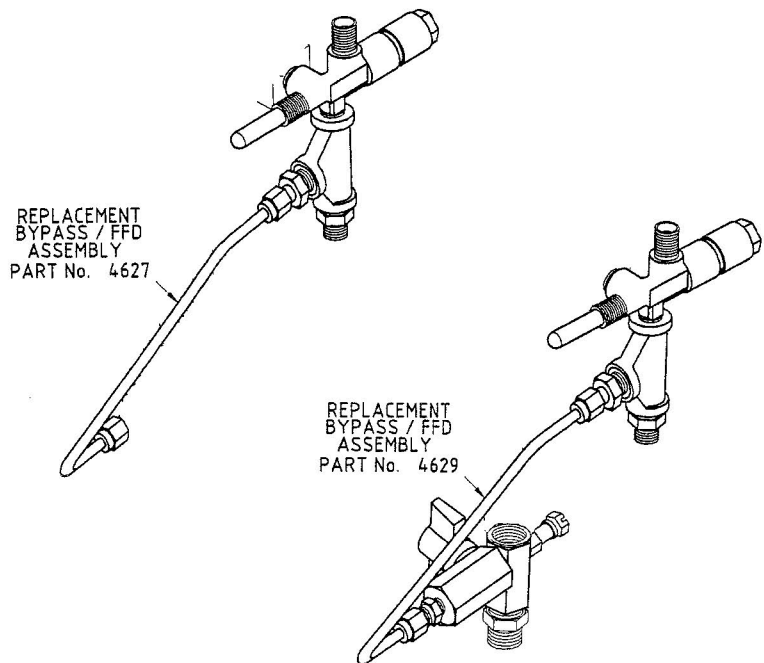
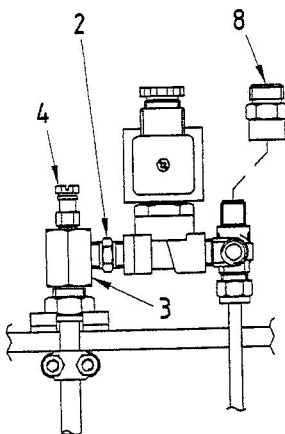
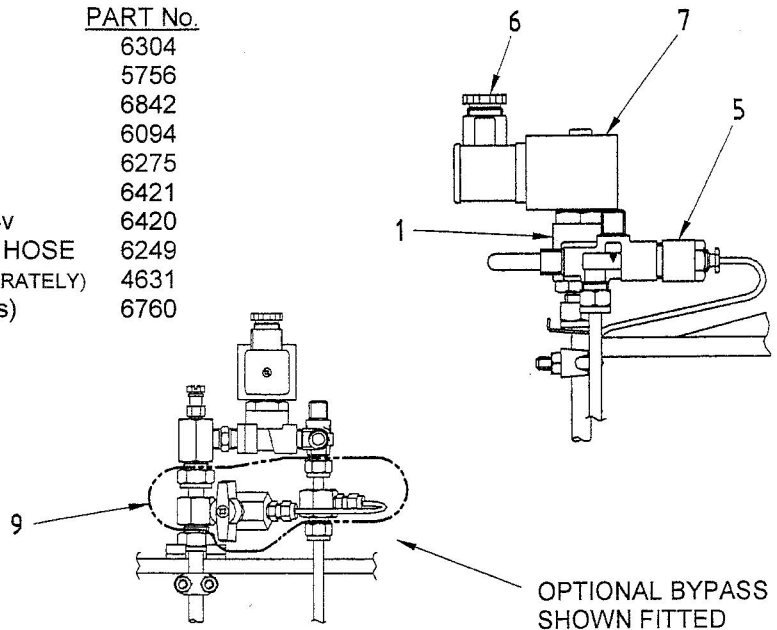


**"V" ZONE CONTROL**  
**24volt 50/60 Hz SOLENOID VALVE. 6 WATTS**

The "V" control has been designed to integrate with centrally operated heating and ventilation systems, enabling individual or zone control.

ITEM	DESCRIPTION	PART No.
1.	SOLENOID VALVE 24v	6304
2.	1/4" NIPPLE BRASS	5756
3.	TEST NIPPLE BLOCK	6842
4.	1/8" TEST NIPPLE ASSY	6094
5.	T.E.M.P. FLAME-FAILURE-DEVICE	6275
6.	CONNECTION PLUG (DIN)	6421
7.	REPLACEMENT SOLENOID COIL 24v	6420
8.	HOSE ADAPTOR FOR 3/8" NATGAS HOSE	6249
9.	BYPASS ASSEMBLY (AVAILABLE SEPARATELY)	4631
10.	24v Transformer (for up to 16 brooders)	6760

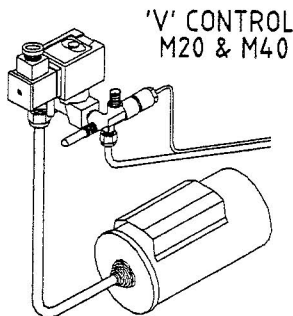

To light the burner, depress the plunger on the Flame-Failure-Device (FFD) and ignite the pilot (please note that whilst the plunger is depressed, main gas flow to the burner is automatically shut off). After 15 seconds, release the plunger and the pilot should remain alight. The Solenoid Valve is 'NORMALLY CLOSED', so to operate the main burner, the coil will need to be connected to a 24volt AC supply and energised.